

Schaerer Coffee Club

Operating instructions

V01 / 3.2017



Schaerer AG
P.O.Box 336
Allmendweg 8
CH-4528 Zuchwil,
Switzerland
info@schaerer.com
www.schaerer.com

Original operating instructions

English
021081

Schaerer Coffee Club

Operating instructions

Publisher

Schaerer AG, Postfach 336, Allmendweg 8, CH-4528 Zuchwil

Edition

Version 01 | 03/2017

Software

V 0.2.19

Concept and editing:

Schaerer AG, P.O.Box 336, Allmendweg 8, CH-4528 Zuchwil, Switzerland

Copyright ©

Schaerer AG, Postfach 336, Allmendweg 8, CH-4528 Zuchwil, Switzerland

This document is protected by copyright. All rights are reserved. The reproduction, distribution or transmission of this document, as well as the transmission via electronic systems or translation into another language, are not permitted without the written consent of Schaerer AG. This applies to both the entire document and individual excerpts thereof. The contents of the document are based on the most current data available at the time of printing. Schaerer AG reserves the right to make changes at any time without further notice. All images, figures and display messages in this manual are only shown by way of example. Due to the wide variety of possible options, each individual machine may differ from the devices depicted herein. Schaerer AG is only liable for the contents of the original German document.

Congratulations on the purchase of your Schaerer coffee machine.

The Schaerer Coffee Club coffee machine is a single-cup fully-automatic machine for espresso, coffee, cappuccinos, lattes, latte macchiatos, milk foam and hot water.

With the powder container available as an option, the Schaerer Coffee Club can also dispense hot chocolate with milk or milk foam.



Follow the operating instructions



- > Read the operating instructions before use.
- > Always follow the operating instructions exactly, especially the safety notes and the Safety chapter.
- > Keep the operating instructions accessible to the staff and all users.

CAUTION

Note the signs and symbols in the operating instructions page 18

*Observe the Safety chapter
▷ from page 8*



Risk of death due to electrocution!



- There risk of death due to the mains voltage inside the coffee machine.
- > Never open the housing.
- > Never loosen the screws and do not remove housing parts.

WARNING

*Observe the Safety chapter
▷ from page 8*



Conditions for use and installation

- If the maintenance specifications are not observed, no liability is assumed for any damages.
- > Follow the operating instructions.
- > Maintenance work and repairs may only be performed by Schaerer Service using original spare parts.

IMPORTANT

*Technical data
▷ from page 101*

*Maintenance
▷ from page 88*

1	Safety	8
1.1	General safety notes	8
1.2	Intended use	14
1.3	Conditions for use and installation	15
2	Introduction	16
2.1	Labelling of coffee machine parts	16
3	Commissioning	20
3.1	Installation location	21
3.2	Unpacking	21
3.3	Commissioning programme	22
4	Operation	24
4.1	Operation safety notes	24
4.2	Switching on the coffee machine	24
4.3	Beverage dispensing	25
4.4	Selection fields (optional)	25
4.5	Special fields (optional)	25
4.6	Connecting the milk	26
	Milk nozzle.	26
	With Schaerer milk cooler	26
	Milk lance (optional).	27
4.7	Milk or milk foam dispensing	27
4.8	Hot water dispensing	28
4.9	Basic Steam (optional)	28
4.10	Cup grid	31
4.11	Bean hopper/Powder container	31
4.12	Manual inlet	32
4.13	Grounds container	33
4.14	Counter grounds collector (optional)	33
4.15	Drip tray	34
4.16	Mains water supply (optional)	34
4.17	Switching off the coffee machine	35
5	Software	36
5.1	Overview	36
	Readiness for use	36
	Ready for operation display fields	36
	Main menu functions	37
	Menu control fields	37
5.2	Readiness for use	38
5.2.1	Ready for operation display fields	38
	Beverage buttons	38
	Warm rinse field	38
	Barista - coffee strength.	38
5.2.2	SteamJet cup warmer	39
5.3	Care	40
	System cleaning	40
	Mixer rinsing	40
	Milk system rinse.	40

Table of Contents

	CleanLock	41
	Instructions	41
	Filter change	41
	Brewer exchange.	41
	Descaling.	41
5.4	Beverages	42
	General information	42
	Filling quantity, multiple brewing and dosing type	43
	Changing recipes.	45
	Text and image	48
5.5	Operating options	49
	Operating elements	49
	Button layout	51
	PostSelection.	52
	S-M-L function	52
	DECAF factor	53
5.6	Info	54
	Last brewing	54
	Timer	54
	Service.	54
	Care.	54
	Water filter and descaling	54
	Log.	54
5.7	Accounting	55
	Counters	55
	Vending devices	55
5.8	PIN rights	56
	Cleaning PIN	56
	Setting PIN	56
	Accounting PIN	56
5.9	Timer	57
	Time/Date	57
	Button layout state.	57
	Button layout overview	57
5.10	System	58
	Milk and foam	58
	Process display	58
	Display and lighting	59
	Water filter	60
	Temperature	61
	Switch-off rinsing	61
	Automatic milk system rinse	61
	Beans empty notification calibration	61
	Frost protection/Preparation for transport	62
5.11	USB	62
	Loading recipes	62
	Loading button symbols.	62
	Saving recipes	62
	Exporting counter	62
	HACCP export	62
	Data backup	63
	Loading data	63
	Loading language	63

Firmware update	63
5.12 Language	63
6 Other settings	64
6.1 Setting the grind level	64
7 Care	65
7.1 Care safety notes	65
7.2 Overview of cleaning intervals	67
7.3 Dishwasher-safe parts	68
7.4 Cleaning programmes	68
7.4.1 System cleaning	68
7.4.2 Mixer rinsing	70
7.4.3 Milk system rinse	70
7.5 Descaling	71
7.6 Manual cleaning	73
7.6.1 Cleaning the control panel (CleanLock)	73
7.6.2 Cleaning the grounds chute (ground slide, optional)	73
7.6.3 Cleaning the collecting tray	74
7.6.4 Cleaning the water tank	74
7.6.5 Cleaning the drip tray	75
7.6.6 Cleaning the housing	76
7.6.7 Cleaning the outlet by hand	76
7.6.8 Cleaning the brewing unit	77
7.6.9 Cleaning the milk system by hand	80
Cleaning the milk hose	81
7.6.10 Cleaning the mixer	82
7.6.11 Cleaning the bean hoppers	83
7.6.12 Cleaning the powder container	84
8 HACCP cleaning concept	86
9 Maintenance and descaling	88
9.1 Maintenance	88
9.2 Schaefer Service	89
10 Notifications and notes	90
10.1 Operation notifications	90
10.2 Error messages and faults	91
10.3 Error without error message	94
11 Safety and warranty	96
11.1 Hazards for the coffee machine	96
11.2 Directives	98
11.3 Operator responsibilities	99
11.4 Warranty claims	100
Appendix: Technical data	101
Technical data of the coffee machine	101
Appendix: Accessories and spare parts	104
Index	106

1 Safety



Incorrect use

- Non-compliance with the safety notes can result in serious injuries.
 - > Observe all safety notes.
-

 **WARNING**

1.1 General safety notes

Dangers for the operator

Maximum safety is one of the most important features of Schaerer products. The effectiveness of the safety devices is only ensured as long as the following is observed:



- > Read the operating instructions carefully before using the device.



- > Do not touch any hot machine parts.



- > Do not use the coffee machine if it is not working properly or is damaged.
- > Only use the coffee machine if it is completely installed.
- > Under no circumstances may the installed safety devices be modified.

 **CAUTION**



- > Under continuous supervision this device can be used by children aged 8 and up and by persons with limited physical, sensory or mental capabilities or a lack of experience and/ or knowledge, provided they have been instructed about the safe use of the device and understand the potential hazards resulting from said use.
 - > Children must not play with the device.
 - > Children must also not be allowed to perform cleaning procedures or user service.
-

 **CAUTION**

In spite of the safety devices, every coffee machine carries some potential risk if used improperly. Please comply with the following instructions when handling the coffee maker in order to prevent injuries or health hazards:



Risk of death due to electrocution!



- There risk of death due to the mains voltage inside the coffee machine.
 - > Never open the housing.
 - > Never loosen the screws and do not remove housing parts.
 - > Never use a damaged power cord.
 - > Avoid damages to the power cord. Do not kink or crush.
 - > Never put the power plug into water or other liquids or pour water or other liquids over the power plug. Always keep the power plug dry.
-

 **WARNING**

**Risk of burns/
Danger of scalding****⚠ CAUTION**

- Hot liquid comes out of the outlets during beverage and steam dispensing. The adjacent surfaces and outlets get hot as well.



- > Do not touch the area under the outlets during beverage and steam dispensing.
 - > Do not touch the outlets immediately after dispensing.
 - > Always put a suitable container under the outlet before use.
-

**Risk of injury****⚠ CAUTION**

- Very long hair could get stuck in the grinder head and get pulled into the coffee machine.
 - > Always protect hair with a hairnet before you open the bean hoppers.
-



Risk of trapping/Risk of injury



- The coffee machine contains moving parts which could injure fingers or hands.
 - > Always switch off the coffee machine and pull out the power plug before reaching into the coffee grinder or into the opening of the brewing unit.
-

 **CAUTION**



Health risk

- > Only make products which are suitable for consumption and the use of the coffee machine.
 - > The powder container, the bean hoppers and the manual inlet may only be filled with the materials intended for use.
-

 **CAUTION**



Health risk

- The milk system cleaners and the cleaning tablets are irritating.
 - > Follow the protective measures on the packaging of the cleaning products.
 - > Do not add the cleaning tablets into the machine until the notification appears on the display.
-

 **CAUTION**

**Health risk/
Risk of irritation and burns****⚠ CAUTION**

- During cleaning, hot cleaning liquid and hot water flow out of the outlets.
 - The hot liquids could irritate the skin and the heat creates a risk of burns.
 - Hot liquids could be in the drip tray.
 - > Never reach under the outlets during cleaning.
 - > Ensure that no one ever drinks cleaning liquid.
 - > Carefully move the drip tray.
-

**Risk of slipping****⚠ CAUTION**

- Liquids can escape from the machine if it is used incorrectly or if errors are made. These liquids can cause a slipping hazard.
 - > Regularly check whether the coffee machine is leak-free and that no water can escape.
-

1.2 Intended use



Incorrect use

- If the machine is not used correctly, it could cause an injury hazard.
 - > The coffee machine must only be used in the correct manner.
-

 **WARNING**

The Schaerer Coffee Club is designed to dispense beverages made of coffee and/or milk and/or powder (e.g. choco or toppings) into suitable containers. This device is intended for commercial use in hotels, restaurants and similar establishments. The device is permitted to be installed at self-service locations when a staff member is present for supervision purposes. The device can be used in businesses, offices and other similar work environments, hotels, motels and bed and breakfast establishments and can be operated by non-experts and customers. Use of this equipment is subject these operating instructions. In legal terms, any other use is not an intended use. The manufacturer accepts no liability for damage resulting from unintended use.

Schaerer Coffee Club must not be used for heating and dispensing any liquids other than coffee, hot water (beverages, cleaning) or milk (cooled, pasteurised, homogenised, UHT).

1.3 Conditions for use and installation



Risk of burning/Risk of injury

- > The conditions for installation and use must be observed.
 - > The conditions for installation and use specified in the Technical data chapter must be observed.
-


 **WARNING**

Technical data
▷ page 102


Preparatory structural work for the electrical connection, the water connection and the waste water connection must be commissioned by the operator of the machine. It must be carried out by licensed installers observing all general, national as well as locally applicable regulations. Schaefer Service may only connect the coffee machine to the prepared connections. They are neither authorised to carry out structural installation, nor are they responsible for its implementation.

2 Introduction

2.1 Labelling of coffee machine parts

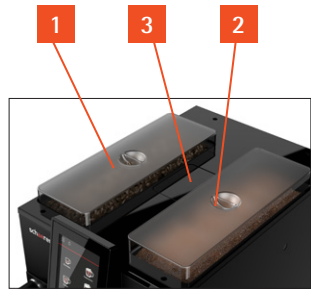

Display

 

- 1 Bean hoppers (up to 2)
- 2 Powder container (for example choco or topping) (optional)
- 3 Manual inlet/Tablet insert
- 4 On/off switch
- 5 Beverage outlet (coffee, milk and choco)
- 6 Water tank
- 7 Cup grid
- 8 SteamJet cup warmer
- 9 Removable drip tray with drip grid
- 10 Grounds container
- 11 Steam outlet
- 12 Hot water outlet
- 13 Touch display for beverage buttons and settings

Ready for operation display

- 14 Menu field (opens the main menu)
- 15 Warm rinse field
- 16 Notification box
- 17 Barista field
- 18 Filling quantity
- 19 SteamJet field
- 20 Steam button in the beverage field

Signs and symbols in the operating instructions



Personal injury safety notes

If the safety notes are not observed, mild to serious injury could occur in the event of incorrect operation.



Personal injury safety notes

If the safety notes are not observed, mild injury could occur in the event of incorrect operation.



Risk of electrocution



Hot steam



Risk of trapping fingers



Hot surfaces



Risk of slipping



Property damage notes

- For the coffee machines
 - For the installation location
 - > Always follow the operating instructions exactly.
-



Notes/Tip

- Notes for safe handling and tips for easier operation.
-

WARNING

Safety notes

Observe the Safety chapter
▷ from page 8

CAUTION

Operation safety notes
▷ page 24

Care safety notes
▷ page 65

Observe the Safety chapter
▷ from page 8

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Technical data
▷ from page 101

NOTE

TIP

Glossary

Term	Explanation
•	• Counting, selection options
*	* Individual work steps
<i>Cursive text</i>	<i>Description of condition of the coffee machine and/or explanations of automatic steps.</i>
Barista	Personal coffee maker
Choco	Hot chocolate
DECAF	Decaffeinated coffee
Beverage dispensing	Dispensing of coffee, hot water or powder beverages
Main water valve	Stopcock, angle valve
Carbonate hardness	Given in °dKH Water hardness is a measure of the limescale dissolved in drinking water.
Coffee outlet	Double outlet is the standard.
Milk system	Single outlet, milk foamer, milk foam adapter, steam nozzle and milk hose
Mixer system	Entire assembly, mixer with portioner for powder-based beverages
Preinfusion	The coffee is briefly pre-brewed before the brewing process to bring out a more intense aroma.
Pressing	Automatic pressing of the ground coffee before brewing
Powder based beverages	For example, choco or topping
Service life	For example: Litre capacity of the water filter
Grounds chute	▷ Counter grounds collector, side 33
Self-service mode	Customer self-service
Rinsing	Intermediate cleaning
Extras	Components of a recipe for a beverage, for example coffee, milk, milk foam, choco

3 Commissioning

(For the first commissioning after delivery from the factory)



Follow the operating instructions



- > Always follow the operating instructions exactly, especially the safety notes and the Safety chapter.
- > Keep the operating instructions accessible to the staff and all users.
- > Read the operating instructions before use.

 **CAUTION**

Important!
Note the signs and symbols in the operating instructions
▷ page 18

Observe the Safety chapter
▷ from page 96



Risk of death due to electrocution if not observed



There risk of death due to the mains voltage inside the coffee machine.

- Never open the housing.
- Never loosen the screws and do not remove housing parts.

 **WARNING**

Observe the Safety chapter
▷ from page 96



Conditions for use and installation

Follow the operating instructions.

IMPORTANT

Technical data
▷ from page 101

3.1 Installation location



- The installation location must be dry and protected from spray water.
- Water, condensation or steam can always escape from a coffee machine.
 - > Do not use the coffee machine in the open.
 - > Set up the coffee machine so that it is protected from spray water.
 - > Make sure to set the coffee machine on a water-resistant surface which is not sensitive to heat to protect the installation surface from damage.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Technical data
▷ from page 101

3.2 Unpacking



- > The packaging material in the box contains accessories. Do not throw away.
- > The water tank and the grounds container contain spare parts. Remove the spare parts before commissioning and thoroughly rinse the grounds container and the water tank.
- > Check whether the coffee machine is intact. In case of doubt, do not put the coffee machine into operation and contact Schaerer Service.
- > Therefore, be sure to keep the original packaging in a safe place should a return delivery be necessary.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Accessories and labelling of machine parts
▷ page 16

Technical data
▷ from page 101

- * Unpack the Schaerer Coffee Club and set the coffee machine on a stable, horizontal surface .
- * Observe the technical data.
- * Plug the connection cable of the coffee machine into the respective socket.

Technical data
▷ page 101

3.3 Commissioning programme

- * Switch on the coffee machine using the on/off switch.

The coffee machine switches on.

The commissioning programme starts.

- * Follow all instructions on the display.



The commissioning programme proceeds step-by-step through the further commissioning process via the display.

- > Follow the display messages.
 - The set values can be changed after commissioning.
-

IMPORTANT

Changing settings

- ▷ *Setting*
- from page 36*

Other instructions

- Connecting milk ▷ Chapter 4.6 page 26

Once the commissioning process has been run in its entirety and all necessary settings have been made, the coffee machine restarts. Calibration is performed automatically.



Risk of burns/ Danger of scalding



- Hot liquid comes out of the outlets during beverage dispensing. The adjacent surfaces and outlets get hot as well.
 - > Do not touch the area under the outlets during beverage dispensing.
 - > Do not touch the outlets immediately after dispensing.
-

CAUTION

Observe the Safety chapter

- ▷ *from page 8*

Inserting the water filter for the water tank (optional)

This point is a step taken during the commissioning programme.

For drinking water with a carbonate hardness above 5°dKH, a Schaerer water filter should be installed, as otherwise the coffee machine can be damaged due to calcification.

Determining the water hardness

- * Obtain the water hardness of the drinking water from the water supplier or use the carbonate hardness tester (with instructions) in the accessories.

The carbonate hardness test is included in the accessories.

Service life

The supplied water filter for the water tank (200 l) at 10 °dKH has a service life for 200 litres of water. The actual service life is dependent on the drinking water hardness and can be found in the following table.

The "German carbonate hardness" unit ("dKH) applies.

Water - hardness	Service life in litres	Water - hardness	Service life in litres
< 4	No filter necessary	15	135
5	400	16	125
6	335	17	120
7	285	18	110
8	250	19	105
9	220	20	100
10	200	21	95
11	180	22	90
12	165	23	85
13	155	24	80
14	145	> 25	70

Note

*No water filter is required at a water hardness of 0 to 4 °dKH.
▷ Commissioning programme, page 20*

4 Operation

4.1 Operation safety notes



Risk of burns/ Danger of scalding



- Hot liquid comes out of the outlets during beverage and steam dispensing. The adjacent surfaces and outlets get hot as well.



- > Do not touch the area under the outlets during beverage and steam dispensing.
 - > Do not touch the outlets immediately after dispensing.
 - > Always put a suitable container under the outlet before use.
-



CAUTION

Observe the Safety chapter
▷ from page 8



Health risk

- > Only make products which are suitable for consumption and the use of the coffee machine.
 - > The powder container, the bean containers and the manual inlet may only be filled with the materials intended for use.
-



CAUTION

Observe the Safety chapter
▷ from page 8

4.2 Switching on the coffee machine

The on/off switch is on the right side of the control panel.

* Press on the on/off switch

A single tone goes off.

The coffee machine switches on and heats up.

Automatic warm rinsing starts.

When the coffee machine is ready to dispense beverages, the display will show "Ready for use".




PIN access control
▷ PIN rights
page 56

4.3 Beverage dispensing

Pressing on the beverage buttons starts dispensing of the set beverages.

- Illuminated button = Ready for dispensing
- Unilluminated button/red triangle in the header = Not ready for dispensing/ button locked


- * Set a beverage container of a suitable size below the outlet.
- * Press on the desired beverage button.

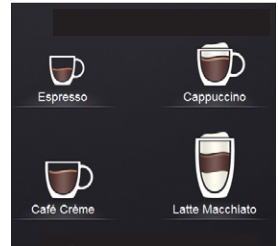


Button functions
 ▷ Operating options
 page 49

Beverage interruption

- * Tap on the beverage button again

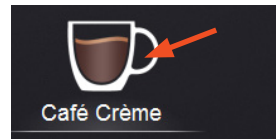

Cancel button

 

Example:
 Decaffeinated field (with 2
 grinders)

4.4 Selection fields (optional)

Selection fields, like the DECAF field in the example, are available as an option. These selection fields appear on the display after beverage selection.


4.5 Special fields (optional)

Special fields are optional and, if desired, are activated in the settings. For example, the pre-selection of the S-M-L filling quantities are special fields. These S-M-L filling quantities must be set for the beverages to make them available. Then, the filling quantity "S" or "L" can be selected and only the beverage buttons provided for this size light up.

M = set beverage size, no pre-selection

S = approx. 25% less than M

L = approx. 25% more than M

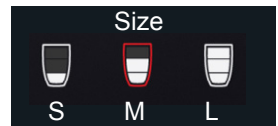

4.6 Connecting the milk

Milk nozzle

Use the appropriate steam nozzle on the milk foamer.

Colour	Milk temperature
• Green (standard)	Uncooled milk (16 to max. 22 °C)
• Orange (accessories)	Cooled milk (up to 10 °C)



The milk storage temperature must be adapted to the milk temperature and the matching steam nozzle. Milk storage temperature

▷ Milk and foam page 58

With Schaerer milk cooler

- * Use the appropriate steam nozzle for cooled milk (orange)
- * Remove the milk container from the cooler
- * Push the lid of the milk container back
- * Fill milk into the milk container
- * Place the lid back on the container
- * Plug the adapter on the milk hose into the connection on the milk container lid
- * Carefully push back the milk container



Milk container



The milk storage temperature must be adapted to the milk temperature and the matching steam nozzle. Milk storage temperature

▷ Milk and foam page 58

Milk lance (optional)



Note

- Clean the milk lance daily.
- The milk hose must not be kinked.

- * Use the appropriate steam nozzle on the milk foamer
- * Put the milk package to the left next to the coffee machine
- * Open the milk lance lid
- * Connect the Plug&Clean adapter to the milk lance
- * Insert the milk lance into the milk packaging
The milk lance must reach to the base of the milk packaging.

NOTE



The milk storage temperature must be adapted to the milk temperature and the matching steam nozzle. Milk storage temperature

▷ Milk and foam page 58

4.7 Milk or milk foam dispensing

- * Set a beverage container of a suitable size below the outlet
- * Tap on the beverage button for milk or milk foam
Dispensing is done in line with the setting in the recipe (dosing type, foam quality, etc.).

Dosing types
▷ Software
▷ Beverages
page 43

4.8 Hot water dispensing

- * Set a beverage container of a suitable size below the hot water outlet
- * Tap on the hot water button

Dispensing is done in line with the set dosing type.

4.9 Basic Steam (optional)



Risk of burns/ Danger of scalding



- Hot liquid comes out of the outlets during beverage and steam dispensing. The adjacent surfaces and outlets get hot as well.
- The lower part of the steam outlet gets very hot.
- > Do not touch the area under the outlets during beverage and steam dispensing.
- > Do not touch the outlets immediately after dispensing.
- > Do not touch the lower part of the steam outlet.
- > Always put a suitable container under the outlet before use.



Note

The dosing type for steam can be set under the

"Beverage" menu item.

Dosing types Start-stop, Portion control, Freeflow and Start-stop-freeflow are available.

The dosing types are described in the Beverage chapter



CAUTION

Observe the Safety chapter
> from page 8

NOTE

Dosing types
> Software
> Beverages
page 43

- * Press on the steam button.
Steam is output as long as the steam button is pressed.

- Steam warms up beverages
- Steam manually foams milk

Heating up beverages

- * Hold a cloth in front of the steam pipe for your own protection
- * Briefly press the steam button

This blows out the condensation.

- * Use a tall and narrow container with a handle
- * Fill the container no more than halfway
- * Put the steam nozzle deep down in the container without touching the bottom on the container with the steam nozzle
- * Tap on the steam button
- * Tap on the steam button again when the desired temperature is reached

This stops steam dispensing.

- * Swivel the steam outlet to the drip tray
- * Tap on the steam button and then tap on it again
- * a second later

The remainders in the steam tube are rinsed out.

- * Wipe off the steam outlet with a moist cloth

The steam dispensing starts after the first tap on the steam button. Tapping a second time stops steam dispensing.

Foaming milk



> Do not overheat the milk, or the amount of milk foam will decrease

TIP

- * Hold a cloth in front of the steam pipe for your own protection
- * Briefly press the steam button

This blows out the condensation.

- * Use a tall and narrow container with a handle
- * Fill the container no more than halfway
- * Put the steam nozzle into the container just under the surface
- * Press on the steam button.

This creates silky, compact milk foam.

- * Release the steam button
- * Swivel the steam outlet to the drip tray
- * Briefly press on the steam button

The remainders in the steam tube are rinsed out.

- * Swivel the steam outlet to the drip tray
- * Tap on the steam button and then tap on it again after a short time

The brief burst of steam rinses residues out of the steam pipe.

- * Wipe off the steam outlet with a moist cloth

4.10 Cup grid

- * Grab the handle at the top of the grounds container
- * Pull out the cup grid as far as it will go

Base height with cup grid Max. 100 mm

Base height without cup grid Max. 177 mm



4.11 Bean hopper/Powder container

Top off the containers as soon as possible to the time of use.

Fill the containers with no more than is needed for a day to ensure the products remain fresh. Always fill the container from front to back.



- Foreign particles may damage the grinder. These damages are excluded from the warranty.
 - > Ensure that no foreign particles enter the bean hopper.
 - > Do not overfill the powder container.
 - > Do not press on the powder and compress it.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

4.12 Manual inlet

The manual inlet is located at the centre on the coffee machine lid.

The manual inlet is used:

- As an inlet for cleaning tablets
- For other types of coffee, for example decaffeinated coffee
- For coffee sampling



- Do not add the ground coffee or cleaning tablets into the machine until the notification appears on the display.
- Only use ground coffee for the manual inlet.
- Do not use instant coffee powder. Do not use coffee powder that is ground too fine.



Tablet inlet

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Preparation with ground coffee via the manual inlet

- * Push on the top on the manual inlet flap to open it
- * Fill in the ground coffee (maximum 15 g)
- * Close the manual inlet flap
- * Press on the desired beverage button.



Manual inlet

4.13 Grounds container

The grounds container collects the used ground coffee. It holds coffee grounds from approx. 30 brewings. A notification appears on the display when the grounds container needs to be emptied. Dispensing of beverages is blocked if the grounds container is not in place.

- * Insert the cup grid into the grounds container.
- * Remove the grounds container.
- * Empty the grounds container.

The cup grid rests on the grounds container. Always hold the grounds container tightly when emptying it.

- * Reinsert the grounds container.
- * Confirm the process on the display.



- Inserting without emptying causes the grounds container to overflow. The coffee machine is dirty. This can cause consequential damages.
 - > Always empty the grounds container before inserting it.
 - > If the grounds container cannot be reinserted, check the shaft for remaining coffee and remove it.



▷ *Cleaning the grounds container*
page 73

IMPORTANT

Observe the *Warranty chapter*
▷ from page 100

4.14 Counter grounds collector (optional)

The coffee machine can be equipped with a counter grounds collector. In this case, the grounds container and the bottom of the coffee machine have a cut-out that is continued through the on-site counter. The coffee grounds are collected in a separate container underneath the counter.

Important

Clean the grounds chute daily
▷ *Manual cleaning*
page 73

4.15 Drip tray



Danger of scalding

- Hot liquids could be in the drip tray.
- > Carefully move the drip tray.
- > Reinstall it carefully so that no unintended water leakage occurs.



In coffee machines without an outlet connection, the filling level sensor reports when the drip tray is full.

- * Carefully remove the drip pan, empty it and reinstall it.

Drip tray sensor



The drip pan can also be removed, for cleaning for instance, in coffee machines with a drain connection.

A sensor monitors whether the drip tray is inserted and what the fill level is. A notification appears on the display if the fill level is at the maximum amount.

- * After receiving a notification, carefully remove the drip pan, empty it and reinstall it.

4.16 Mains water supply (optional)

The mains water supply to water and waste water is only possible using a retrofit kit.



With a mains water supply, the water tank must only be removed if the coffee machine is switched off.

CAUTION

Observe the Safety chapter
▷ from page 8

Clean the drip tray daily

Care ▷ from page 65



NOTE

IMPORTANT

Mains water retrofit kit

4.17 Switching off the coffee machine



Follow hygiene standards

- Hazardous bacteria can grow in the coffee machine.
 - > Before switching off the coffee machine, perform the daily switch-off rinsing.
-



Follow the instructions

- No liability is assumed for damage resulting from the failure to do so
-

The on/off switch is on the right side of the control panel

- * Briefly press on the On/Off switch (approx. 1 second)

The coffee machine switches off.

- * Pull the power plug

Coffee machines with mains water supply:

- * Close the main water valve of the water supply line

CAUTION

Observe the *Safety chapter*
▷ from page 8

Clean the coffee machine as specified in the instructions.

Care ▷ from page 65

IMPORTANT

Observe the *Warranty chapter*
▷ from page 100



PIN access control
▷ *PIN rights*
page 56

5 Software



- When setting beverages, the same safety notes apply as for the operation of the coffee machine.
 - > Observe all operating safety notes.

CAUTION

Operation safety notes
▷ page 24

5.1 Overview

Readiness for use

Page 38



Button layout
▷ Operating options
page 49

The fields and buttons on the display are available depending on the setting and machine version.

Ready for operation display fields

Page 38



SteamJet cup warmer
Page 39



Warm rinsing
Page 38



Barista (coffee strength)
Page 38



Notifications
Page 90



Decaffeinated field
Page 25

Main menu functions

from page 40



Care

Page 40



Info

Page 54



Timer

Page 57



System

Page 58



Beverages

Page 42



Operating option

Page 49



USB

Page 62



Language

Page 62



Accounting system

Page 55



PIN rights

Page 56

Menu control fields



To the main menu



Confirm the value/setting



Return to the previous menu



Delete the value/setting



PIN entry



Test preparation



Next, previous, start



Back



Loading settings



Calling up temperature



Saving settings

Messages on the display



Error message



Milk temperature display (optional)

5.2 Readiness for use

Ready for operation display

The display shown when the machine is ready for use depends on the options of the coffee machine and individual settings.

Button layout
 ▷ Operating options
 page 49

5.2.1 Ready for operation display fields

Beverage buttons

All output-ready beverage buttons are illuminated. Swiping the display vertically shows the other beverages available for display. The beverage dispensing starts after tapping on the desired beverage button.



Example: Cappuccino button

Warm rinse field

* Tap the "warm rinsing" field.

A process of rinsing the coffee lines with warm water starts. The water warms up the brewing system and ensures that the brewed coffee is at an optimum temperature.

This is recommended after a long brewing pause, especially before dispensing a cup of espresso.



Warm rinse field active/inactive
 ▷ Operating options
 page 50

Barista - coffee strength

	Display	Coffee strength
Standard	2 beans	Normal, as set
Tap 1 x	3 beans	15% stronger than set*
Tap 2 x	1 bean	15% weaker than set*

* Maximum coffee ground quantity 15 g per brew

The coffee strength is changed one time for the next brew.



Barista field active/inactive
 ▷ Operating options
 page 49

5.2.2 SteamJet cup warmer



Risk of burns/ Danger of scalding



- Hot steam is output through the SteamJet cup warmer. At the same time, the cups and the adjacent surfaces are hot.



- > Use heat-resistant drink containers.
- > Always put a cup with the opening at the bottom over the cup warmer before steam is dispensed.
- > Do not touch the adjacent surfaces shortly after dispensing.
- > Do not touch the outlets immediately after dispensing.
- > Never use the SteamJet function without using a drip grid or the cup warmer insert.

CAUTION

Observe the Safety chapter
▷ from page 8

Clean the drip tray daily

Care ▷ from page 65




Health risk/Hygiene

- The SteamJet function is intended for warming up drink containers and is not suitable for cleaning.
- > Instead, use a freshly-rinsed drink container to warm the cups.

CAUTION

Observe the Safety chapter
▷ from page 8

The SteamJet cup warmer heats cups with hot steam.

- * Place a cup into the cup warmer with the opening facing down.
- * Tap the  field.

Hot steam slowly flows into the cup from below.

The steam flow is output as long as is specified in the settings.


- * Tap on the SteamJet field again.

The steam flow immediately stops.



SteamJet field active/inactive
▷ Operating options
page 50

5.3 Care

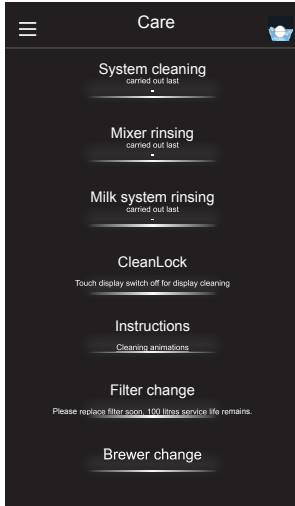


Menu control fields
▷ Overview
page 37

Care chapter
▷ from page 65

HACCP cleaning concept
▷ from page 86

System cleaning

 
After system cleaning with or without switching off the coffee machine.



System cleaning
Care
▷ from page 68

Mixer rinsing

 
Mixer rinsing is an intermediate rinsing of the mixer.



Mixer
Care
▷ page 70

Milk system rinse

 The milk system rinse rinses the milk hose with the milk nozzles and the combi outlet.



Milk system rinse
Care
▷ page 70

CleanLock

- * Tap on **CleanLock**

A 15-second countdown starts.

The touch display can now be cleaned.

The touch display is reactivated 15 seconds after the last time it is touched.



Instructions

Animated instructions on the available cleaning programmes and for the installation and disassembly of the coffee outlet, milk hose, mixer system, brewing unit and SteamJet.



 
Filter change

When the end of the filter service life is reached, a daily notification appears to remind that the filter must be changed.

The filter must be changed within one week; otherwise, the notification will appear after every brewing.

- * Change the filter
- * Confirm that the filter has been changed

After the filter has been changed, a programme sequence for rinsing and bleeding the water filter and the water system is performed. While doing so, hot water flows out of the hot water outlet.




Follow the water filter instructions!

The displays lead through the programme step-by-step. Follow the instructions!

Brewer exchange

 
If the brewing unit is exchanged, this routine must be done.



Descaling

The water hardness, the water flow and whether a water filter is used determine the remaining litres until descaling is necessary.

 This litre specification is calculated by the Schaerer Coffee Club.



*Descaling chapter
▷ from page 71*

5.4 Beverages

General information



Test output

For many beverage settings, is it possible to start a test output with the new settings before the recipe is saved.

- * Change the settings as desired
 - * Tap the on the "Test output" field
- The beverage is dispensed with newly-set values.*
- * If the beverage is as desired, tap on the Save symbol
- The recipe is saved.*



Example: Cappuccino button

Saving recipes

The changed recipe is saved here



Loading recipes

A saved recipe is loaded here on a beverage button

- * Tap on a beverage button
- * Tap the on the "Load recipes" field

A sub-menu opens.

- * Mark the desired recipe
- * Tap the on the "Save recipes" field

The beverage button is assigned with the newly-selected recipe.



Filling quantity, multiple brewing and dosing type



Filling quantity

Set the desired filling quantity. The recipe is adjusted appropriately.

100% corresponds to the previously saved value.

Filling quantity S-M-L

The recipes are generated for the sizes S and L. M is as set.

Standard value:

S = 25% less than set.

L = 25% more than set.

	S	M	L
	72	97	122
	73	98	123
	74	99	124
%	75	100	125
	76	101	126
	77	102	127
	78	103	128
	<input checked="" type="checkbox"/> S-active	<input checked="" type="checkbox"/> Active	<input checked="" type="checkbox"/> L-active

Changing S-M-L for individual beverages

▷ Filling quantity

Activating S-M-L and changing generally for all beverages

▷ Operating options

▷ S-M-L

page 52

Operation

▷ Special buttons

▷ page 25

S-M-L function

The S-M-L function can be activated in the operating options. A deviation from the standard fill quantity can also be changed in general for all beverages in the operating options.

The S-M-L quantities can be changed under Filling quantity for deviating individual beverages.

Every size can be separately set actively or inactively. Inactive means that the size is no longer available for selection for the individual beverage.

Multiple brewings

The beverage is brewed several times as set. Up to 12 times the set quantity can be dispensed at the push of a button.

Available for coffee and mixed milk beverages as well as for hot water with the "Portion control" dosing type.


Dosing type

- **Start-stop**
The dispensing is carried out until the set quantity has been reached. Dispensing can be stopped earlier by pressing the button again.
- **Portion control**
The set quantity is dispensed. The dosing type is available for milk, foam and hot water.
- **Freeflow**
The beverage or steam is dispensed as long as the button remains pressed.
- **Start-stop freeflow**
Briefly pressing the button starts the start-stop dispensing process.
Pressing the button for longer than 1 second starts the freeflow dispensing process.

Changing recipes



Menu control fields
 ▷ Overview
 page 37

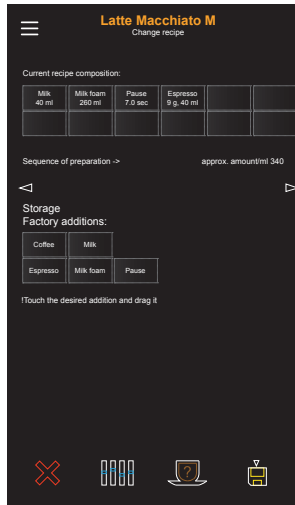

Current recipe structure

The extras contained in the recipe are shown here. The preparation sequence is from left to right. Extras listed under one another are prepared at the same time.

The software reports if the desired options are technically impossible.

Supply of factory extras

The extras which can be used for the recipes are shown here.

- * Tap on the desired extra and push it into the current recipe structure.

Deleting extra

Delete a marked extra from the current recipe structure.



Changing extra

* Mark the extra and tap on the "Change extra" symbol.



The **Change extra** menu opens.

The setting options for the desired extra are displayed.

The saved and the current data is displayed.



The current values



The values saved by Service



The factory values

Ground coffee quantity

Given in grams (g)



Water/Milk volume

Given in millilitres (ml)



Coffee quality

The quality levels influence the brewing of the coffee.

The higher the quality level, the more intensive is the release of the coffee's flavouring agents.



Quality levels

- 1 After being pressed, the coffee powder is given room to expand.
- 2 After being pressed, the beverage is brewed directly.
- 3 After being pressed, a preinfusion takes place
- 4 After being pressed and preinfusion, the powder is pressed while wet.
- 5 Like quality 4, but more forceful wet pressing.
- 6 Like quality 5, but longer and more forceful wet pressing.
- 7 Like quality 6, but longer and more forceful wet pressing.


Note

If very fine ground coffee is used with a very small amount of brewing water, a high quality level can lead to brewing water errors.

Text and image



Menu control fields
▷ Overview
page 37

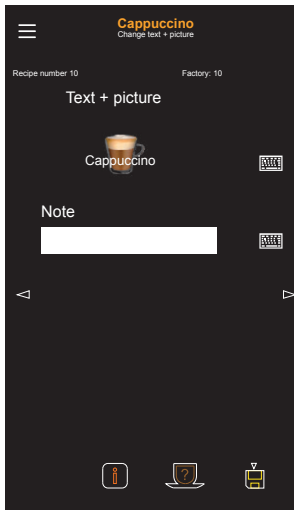


The beverage name and the image of a beverage button are adjusted here.
Activate the keyboard with the keyboard field.

Remarks

A note on the beverage can be stored here.

5.5 Operating options

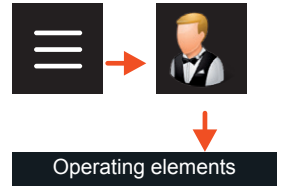

Operating elements

Self-service mode

Some functions could be switched to be inactive for self-service mode.

These functions and their fields are not shown when they are inactive.

Options: • Active • Inactive

Standard value: Inactive

Self-service mode means the following settings are switched at the same time.

- Barista field: inactive
- Warm rinse field: inactive
- SteamJet: inactive
- Manual inlet: inactive
- Beverage selection: inactive
- Beverage interruption: inactive
- Menu field: delayed
- Error indication: Symbol

Barista field

Options: • Active • Inactive

Standard value: Active

Active The field appears when the machine is ready for use.

Warm rinse field

Options: • Active • Inactive

Standard value:  Active

Active The field appears when the machine is ready for use.

Menu field

Options: • Immediately • delayed

Standard value: Immediately

Immediately The menu field immediately reacts after tapping on the field.

SteamJet

Options: • Active • Inactive

Standard value:  Active

Active The field appears when the machine is ready for use.

Error indication

The fault is reported with different colours in the display header.

Red = Error message, must be fixed immediately

Orange = Information, no immediate action necessary

Cup size adjustment

The free filling quantity selection can be activated in the operating options.


The filling quantity can be set freely after beverage selection.

Options: • Active • Inactive

Standard value: Inactive

To do so, select centre, left or right cup. The filling quantity is given in percent.

Centre cup	100% as set
Left cup	25% less
Right cup	25% more

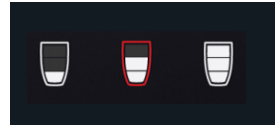

Language pre-selection

Whether the pre-selection of languages and flags is possible via beverage setting is set here.

 
Pre-selection is only possible if "SS + flags" is set under button layout.

Options: • Active • Inactive

Standard value: Inactive

Button layout

Different standard layouts are saved here and can be selected.



PostSelection

Options: • Active • Inactive

Standard value: Inactive



PostSelection

Active The selection of the coffee type and the beverage size are queried after the beverage has been selected. The names of the coffee types and the sizes can be changed. (Coffee type and S-M-L).

- Size 1
- Size 2
- Size 3
- Portioner 1
- Portioner 2

Some functions could be switched to be inactive for self-service mode.

The functions and their fields are not shown when they are inactive.

S-M-L function

Small

Standard change factor of the beverage size for S recipes which are newly activated.

Standard value: 75 %

Large

Standard change factor of the beverage size for L recipes which are newly activated.

Standard value: 125 %

Options: • Active • Inactive

Standard value: Inactive



S-M-L



Beverage pre-selection

Options: • Active • Inactive

Standard
value: Inactive

Active Previously selected beverages are dispensed without the button being pushed again.

Beverage interruption

Options: • Active • Inactive

Standard
value: Active

Active Beverage dispensing can be interrupted by pressing the beverage button again.

DECAF factor

The value for the DECAF factor is entered here. The ground coffee quantity for DECAF is determined in percent of the ground coffee quantity set in the recipe.

This setting applies for all coffee beverages with the "DECAF" pre-selection.

Options: • Active • Inactive

Standard
value: Inactive


Decaf factor

At a 15% decaf factor, coffee, for example, is brewed with 15% more ground coffee when preparing with the decaf function.

 
5.6 Info

The Info menu offers the selection options described in the following.




Last brewing

Information on the last brewing.



Timer

 The timer weekly overview is called up. All switching-on and switching-off times are shown in this overview.



Service

Contact information for Schaerer Service.
Serial number of the coffee machine.



 
Care

The last cleanings and care measures which run via coffee machine programmes are shown here.



Water filter and descaling

Information on the remaining service life of the water filter and the time of the next descaling process.



Log

Log of the events and errors during operation and cleaning of the coffee machine.



5.8 PIN rights

A PIN can be assigned for all of the areas listed below.

- Cleaning
- Settings
- Accounting



The PINs are hierarchically structured.

That means, for example: The setting PIN simultaneously releases all rights for the cleaning PIN, but not all the rights for the accounting PIN.

If no PIN is assigned, the area is accessible without a PIN.

 
If a PIN is assigned to an area, no access is granted without that PIN.

Cleaning PIN

After the valid PIN is entered, access to:



Care



Setting PIN

 
After the valid PIN is entered, access to:




Care



Beverages



Operating option

 

Accounting (without "deletion")



Timer



System



Language



USB



Accounting PIN

After the valid PIN is entered, access to:



Care



Beverages



Operating option



Accounting (with "deletion")



PIN



Timer



 
System



Language



USB



5.9 Timer

Time/Date

The current time and data are set here.


Button layout state

Options: • Active • Inactive



Standard value: Inactive

Active Button layouts can be assigned automatically using the timer.


Button layout overview

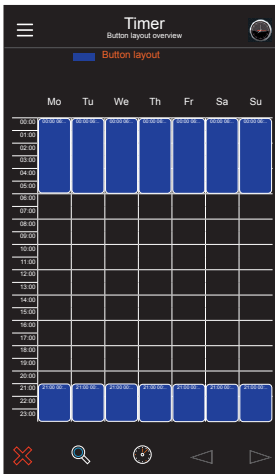

  The weekly overview of all switching times for the button layout is displayed. The settings can be changed directly in the overview.



 For example self-service from 9 pm to 6 am.



The minimum time for displaying a button layout is 30 minutes.

5.10 System

Milk and foam

The central, generally-applicable values for milk and milk foam are set here. These values apply for all available recipes.

If special values for milk and milk foam are set in the recipes, they remain valid and are not changed.

Milk storage temperature

Options:

 

>16 °C = green milk nozzle (standard)

<10 °C = orange milk nozzle (accessories)

Process display

Options: Line, circle, off

Standard
value: Line

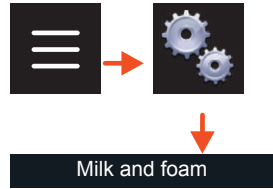



Display and lighting

The lighting can be activated or deactivated.

Lighting when ready for use

- Lighting at the outlet

Options: • Active • Inactive

Standard
value: Active

Event display (message)

Options: • Active • Inactive

Standard
value: Inactive

Display brightness

The display brightness is set here.

Automatically decreasing brightness

Options: • Active • Inactive

Standard
value: Active

Active If the decreasing brightness function is set to "active", the display brightness is automatically decreased 5 minutes after the last beverage dispensing process. If the display brightness has been decreased, the display goes back to the selected brightness when the display is tapped for the first time. Tapping on the beverage button for the second time dispenses the corresponding beverage.

Touch calibration

Recalibrate the touch display.

Display background

The colour design for the touch display can be set here.

- Colour for the **main page**
- Colour for the **following pages**

Water filter

Options: • Active • Inactive

Standard value: Inactive

Active A water filter is present. Service life and water hardness can be queried.

Measured carbonate hardness

The measured water hardness in °dKH is entered here.

- * Obtain the water hardness of the drinking water from the water supplier or use the carbonate hardness tester (with instructions) in the accessories.

The carbonate hardness test is included in the accessories

Measured total hardness



If the coffee machine is operated with incorrectly set water hardness, this can lead to a high level of calcification and therefore to leaky valves.

No liability is assumed for damages resulting from this.

Filter service life (water filter)

The filter service life in litre is entered here if there is an active water filter.



Water filter

Note

No water filter is required at a water hardness of 0 to 4 °dKH.

We recommend using the bestmax V water filter for coffee machines with mains water supply.

NOTE

*Water filter service life
▷ page 23*

Temperature

Boiler

The boiler water temperature is set here. (coffee brewing water temperature)



Temperature

Switch-off rinsing

Options: • Active • Inactive

Standard
value: Active


Active When switching off of the coffee machine, the system cleaning must be performed if milk beverages have been dispensed since the last cleaning.


Switch-off rinsing

Automatic milk system rinse

Options: every 120 min, 52 hours

Standard
value: every 52 hours


Automatic milk
system rinsing

Beans empty notification calibration

The beans empty notification is recalibrated here. The container must be refilled as soon as the "Refill beans" notification appears even though there are still beans in the container.


Beans empty message
calibration

Frost protection/Preparation for transport

If the coffee machine is sent via a forwarding agent or a parcel service, this programme must be run in advance to prevent damages.



5.11 USB

 
Data exchange is possible using the USB connection. As soon as the USB stick is inserted, the functions become active.

The USB connection is on the left side of the display.




Loading recipes

Recipes saved on the USB stick are loaded to the coffee machine here.




Loading button symbols

 Images or beverage symbols saved on the USB stick are loaded to the coffee machine here.




Saving recipes

 The current recipes from the coffee machine are exported onto the USB stick here.



Exporting counter

 The current counter states from the coffee machine are exported onto the USB stick here.




HACCP export

The cleanings performed are logged and are exported here to the USB stick for the HACCP certificate.




Data backup

 Set data such as machine data, beverage data, etc. is saved on the USB stick here.




Loading data

 Saved data such as machine data, beverage data, etc. is loaded to the coffee machine from the USB stick here.
(Can be protected with a PIN.)




Loading language

 If available, an additional display language can be loaded to the coffee machine from the USB stick here.



Firmware update

 Only for Service.



5.12 Language

The display language is set here.
The available languages are displayed in English.



6 Other settings

6.1 Setting the grind level



Risk of trapping/Risk of injury

- The coffee grinder contains moving parts which could injure fingers.
- > Never reach into the grinders while the coffee machine is running and the product hoppers have been removed.



 **CAUTION**

Observe the *Safety chapter*
▷ from page 8



Finer setting of grind level

- Making a big change to a finer grind level can block the coffee grinder.
- > Only set the grind level finer with one revolution with the multi-tool.
- > Then dispense a coffee beverage using the finer grinder setting.
- > Repeat this step until the desired grind level is set.

Coarser setting of grind level

A change to a coarser grind level can only be set once.

IMPORTANT

Observe the *Warranty chapter*
▷ from page 100

- * Initiate coffee dispensing and wait until the grinder starts up.
- * Adjust the grinding level as required using the multi-tool while the mill is running.

Grind level fine  Grind level coarse 



Multi-tool

7 Care

7.1 Care safety notes

Regular cleaning is a requirement for fault-free operation of the coffee machine and for optimal coffee quality.



Health risk/Hygiene

- Milk is very sensitive. Hazardous bacteria can grow in the milk system.
 - > Clean the milk system daily after use with the milk system rinse.
 - > Perform the 1x weekly system cleaning after the end of the business day.
 - > After system cleaning, perform manual cleaning of the milk foam and the steam nozzle.
 - > Exchange the milk hose if needed, no later than after 6 months.
 - > Exchange the mixer hose if needed.
 - > Observe all hygiene notes.
 - > Observe the HACCP cleaning concept.



CAUTION

Observe the Safety chapter
▷ from page 8



Health risk/Hygiene

- Bacteria can spread in a coffee machine which is not in use.
 - > Carry out all cleaning processes before and after operating breaks of several days.



CAUTION

Observe the Safety chapter
▷ from page 8



Health risk/Hygiene

- All cleaning products are perfectly matched to the cleaning programmes.
 - > Use only Schaerer cleaning and descaling agents.
-

 **CAUTION**

*Observe the Safety chapter
▷ from page 8*



Health risk/

Risk of irritation and burns



- Hot cleaning liquid flows out of the outlet during cleaning.
 - The hot liquids could irritate the skin and the heat creates a risk of burns.
 - > Never reach under the outlets during cleaning.
 - > Always lock the touch display using the "CleanLock" before cleaning.
 - > Ensure that no one ever drinks cleaning liquid.
-

 **CAUTION**

*Observe the Safety chapter
▷ from page 8*

7.2 Overview of cleaning intervals

Care					
Daily	Weekly	Regularly	Automatically	Notification	
Cleaning programmes					
	x				System cleaning
x					Mixer rinsing
x					Milk system rinse
Descaling					
				x	Descaling
Manual cleaning					
x					Clean the control panel (CleanLock)
x					Clean the grounds container
		x			Clean the collecting tray
	x				Clean the water tank
x					Clean the drip tray
x					Clean housing
		x			Clean the outlet by hand
		x			Clean the brewing unit
(x)	x				Clean the milk system by hand
(x)	x				Clean the mixer *
		x			Clean the bean hoppers
		x			Clean the powder container *



Cleaning programme ▷
from page 68

▷ Page 71

▷ Page 73

▷ Page 73

▷ Page 74

▷ Page 74

▷ Page 75

▷ Page 76

▷ Page 76

▷ Page 77

▷ Page 80

▷ Page 82

▷ Page 83

▷ Page 84

Daily = at least once daily and as needed

Weekly = weekly cleaning

Regularly = regularly as needed

Automatically = automatic drain

Notification = After notification on the display

(x) = daily if there are high levels of contamination

* = optional (depending on machine configuration)

7.3 Dishwasher-safe parts



The parts listed in the table can be safely cleaned in a dishwasher.
All parts not listed here cannot be put in a dishwasher

IMPORTANT

Dishwasher-safe coffee machine parts
Grounds container
Drip tray
Drip grid without SteamJet
Drip grid with SteamJet
Container extension without lid
Powder container without lid

7.4 Cleaning programmes

7.4.1 System cleaning

System cleaning is an automatic cleaning programme which cleans the coffee system of the coffee machine with Schaerer cleaning tablets. A milk system rinse and a mixer rinse are part of the system cleaning process.
Total time required: about 10 minutes

Animated instructions

- ▷ *Coffee machine*
- ▷ *Main menu*
- ▷ *Care*
- ▷ *Instructions*



Health risk/Risk of irritation and burns



- During cleaning, hot cleaning liquid and hot water flow out of the outlets.
- The hot liquids could irritate the skin and the heat creates a risk of burns.
- > Never reach under the outlets during cleaning.
- > Before every cleaning, put a collecting container which can hold at least 3 litres under the outlet.
- > Ensure that no one ever drinks cleaning liquid.

CAUTION

*Observe the Safety chapter
▷ from page 8*



The cleaning programme proceeds step-by-step through the system cleaning via the display.
Follow the notifications.

IMPORTANT**System cleaning****Start-up**

- * Call up the Care menu
- * Tap on **Cleaning programmes**
- * Tap on **System cleaning**

The following question appears: "Switch off after cleaning?"

- If confirmed with **Yes**, the coffee machine switches off after cleaning.
- If confirmed with **No**, the coffee machine restarts after cleaning.
- * Select the desired option
- * Follow the information on the display



During cleaning, a small amount of rinse water could get into the grounds container. This is not an error.

7.4.2 Mixer rinsing



Health risk/Danger of scalding

- Hot rinse water flows out of the outlet during rinsing.
 - > Never reach under the outlets during rinsing.

CAUTION

Observe the Safety chapter
▷ from page 8



Before starting operation and after the end of the business day, a rinse must be done.

NOTE

The mixer rinse can be started independently.

- * Call up the Care menu
- * Tap on **Cleaning programmes**
- * Tap on **Mixer rinse**
- * Follow the information on the display

Animated instructions

- ▷ *Coffee machine*
- ▷ *Main menu*
- ▷ *Care*
- ▷ *Instructions*

7.4.3 Milk system rinse



Health risk/Danger of scalding

- Hot rinse water flows out of the outlet during rinsing.
 - > Never reach under the outlets during rinsing.

CAUTION

Observe the Safety chapter
▷ from page 8

The milk system rinse can be started independently. This is useful if long breaks are taken between the dispensing of milk beverages.

The milk system rinse rinses out the milk hose and the milk foamer.

- * Call up the Care menu
- * Tap on **Cleaning programmes**
- * Tap on **Milk system rinse**
- * Follow the information on the display

Animated instructions

- ▷ *Coffee machine*
- ▷ *Main menu*
- ▷ *Care*
- ▷ *Instructions*

▷ *Cleaning the milk system by hand*
page 80

7.5 Descaling



Health risk/Risk of irritation and burns



- Hot cleaning liquid or descaling solution flows out of the outlet during cleaning and descaling.
 - The hot liquids could irritate the skin and the heat creates a risk of burns.
 - Cleaning and descaling agents can be hazardous to health if touched, accidentally or on purpose.
 - > The coffee machine must be completely installed before descaling starts.
 - > Never reach under the outlets during cleaning or descaling.
 - > Ensure that no one ever drinks cleaning liquid or descaling solution.
 - > Familiarise yourself with the product information on the descaling solution bottle.
-

**CAUTION**

Observe the Safety chapter
▷ from page 8



Risk of burns



- Hot liquid comes out of the outlets during beverage and steam dispensing. The adjacent surfaces and outlets get hot as well.
 - > If the coffee machine is heated up, a cooling down routine starts. Duration of cooling down routine: 5-10 minutes.
 - > Wait until the end of the cooling down routine.
-

**CAUTION**

Observe the Safety chapter
▷ from page 8



- Schaerer cleaning products are matched to the materials and tested. Other descaling agents may damage the coffee machine.
 - > Only use Schaerer descaling agents for descaling.

Liability cannot be accepted for damages resulting from the use of other descaling agents, warranty claims become invalid.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

The exact time for descaling is determined by the water hardness, water throughput and whether or not a water filter is used. This point in time is calculated and displayed by the Schaerer Coffee Club.

The descaling process consists of four stages:

- Cooling down routine (if machine is heated up)
- Preparation
- Descaling
- Rinsing



Total time for descaling
procedure approx. 80 minutes.
Do not stop the procedure at
any point before it is completed.

The following is needed during the descaling process:

- 2 bottles of Schaerer liquid descaler (0.75 litres each).
 - 1 bottle of water (0.75 litres).
 - 5 litre collection container
-



The display messages lead through the programme step-by-step. When started, a sequence begins which must be followed. Follow the messages.

IMPORTANT

Calling up the descaling programme

- * Call up the Care menu
- * Tap on **Descaling**
- * Follow the display messages

▷ Main menu
▷ Care
▷ Descaling

7.6 Manual cleaning

7.6.1 Cleaning the control panel (CleanLock)

Tap on "CleanLock", then a 15-second countdown starts. The touch display can now be cleaned. The touch display is reactivated 15 seconds after the last time it is touched.



Danger of scalding

- If a beverage is accidentally initiated, there is a risk of injury.
- > Always lock the touch display using the "CleanLock" before cleaning.



- There is a risk that scratches or dents will occur during cleaning.
- > Do not clean with abrasive agents or similar.
- > Do not use aggressive cleaning agents.
- > Only use soft cloths for cleaning.

7.6.2 Cleaning the grounds chute (ground slide, optional)

- * Empty the grounds container.
- The cup grid rests on the grounds container. Always hold the grounds container tightly when emptying it.*
- * Rinse out the grounds container with running drinking water
 - * Clean with a moist cloth
 - * Dry the grounds container and reinsert it



- > Never use force! Risk of breakage.

Order numbers for the
Schaefer care programme
▷ Accessories and spare parts
page 103

CAUTION

Observe the Safety chapter
▷ from page 8

IMPORTANT

Observe the Warranty chapter
▷ from page 100



IMPORTANT

Observe the Warranty chapter
▷ from page 100

7.6.3 Cleaning the collecting tray

Remove and clean the collecting tray once a week. *Low water volume in the collecting tray does not mean there are leaks; this is caused by the system design.*

The collecting tray is under the grounds container. Clean the collecting tray when needed.

- * Remove the grounds container.
- * Remove the collecting tray and clean thoroughly with pure drinking water.
- * Dry the collecting tray and insert it.
- * Insert the grounds container.



7.6.4 Cleaning the water tank

Thoroughly rinse out the water tank with pure water once a week.



7.6.5 Cleaning the drip tray



Danger of scalding



- Hot liquids could be in the drip tray.
- If the drip tray does not correctly engage, for example after cleaning, there is a risk of burns from hot fluids.
 - > Carefully move the drip tray.
 - > Reinstall it carefully so that no unintended water leakage occurs.
 - > Always make sure the drip tray is positioned correctly.

- * Carefully lift and remove the drip tray from the front
- * Remove the drip grid and clean with the cleaning brush
- * Thoroughly clean the drip tray
- * Thoroughly clean the SteamJet outlet and cover with the supplied cleaning brush
- * Then rinse the drip tray and drip grid with pure drinking water
- * Dry the drip tray and drip grid, put them together and reinsert



CAUTION

Observe the Safety chapter
▷ from page 8



7.6.6 Cleaning the housing



- There is a risk that scratches or dents will occur during cleaning.
 - > Do not clean with abrasive agents or similar.
 - > Use only very mild cleaning products.
 - > Do not use strong alkaline, alcoholic or degreasing cleaning products.
 - > Only use soft cloths for cleaning.
-

- * Switch off the coffee machine using the on/off switch.
- * Allow the machine to cool off.
- * Clean the housing of the cooled coffee machine with a moist cloth.
- * Rub dry using a fine wool cloth.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Note

There are problems with resistance to alkaline cleaning products, solvents such as acetone, carbon, carbon tetrachloride, paint thinner or alcohol combinations > 5%, ammonia, benzol, glycerine, xylol, scouring agents, degreasing washout solvents and strong spray cleaners are also not suitable

7.6.7 Cleaning the outlet by hand

Regularly clean the outlet from the outside with a damp cloth and clean the outlet options with suitable brushes.

7.6.8 Cleaning the brewing unit



Risk of trapping/Risk of injury



- The coffee machine contains moving parts which could injure fingers or hands.
- There is a risk of crushing when removing the brewing unit
 - > Always switch off the coffee machine and pull out the power plug before reaching into the coffee grinder or into the opening of the brewing unit.
 - > Hold the brewing unit firmly and carefully remove it



CAUTION

Observe the Safety chapter
▷ from page 8

The brewing unit can be cleaned as needed

- * Press the on/off switch until the coffee machine switches off
- * Pull the power plug
- * Insert the cup grid into the grounds container
- * Remove the grounds container.
- * Remove the collecting tray
- * Remove the drip tray

The brewing unit is now accessible.



Risk of burns



- The brewing unit may still be hot directly after switching off the machine.
 - > Let the coffee machine cool before cleaning.



CAUTION

Observe the Safety chapter
▷ from page 8



- The brewing unit can slide downwards.
 - > Always hold the brewing unit firmly.
 - > Never use force! Risk of breakage.

IMPORTANT

Observe the Warranty chapter
▷ from page 100

- * Use one hand to reach under the brewing unit into the shaft, undo the lock and hold (Figure 1)
- * Slowly lead the brewing unit all the way down, tip it and remove it towards the front
- * Remove the brewing unit and hold on tight while doing so

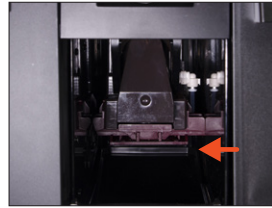


Figure 1

Use the multi-tool from the accessories.

- * Turn the thread on the head of the brewing unit anticlockwise (Figure 2) until the ejector is located in the front position.
- * Carefully pull the springs outwards and press them down

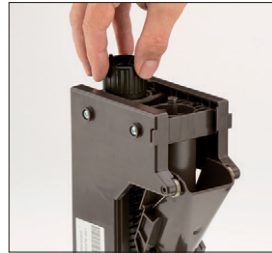


Figure 2

This unlocks the insertion chute.

- * Fold the insertion chute [1] upwards
- * Clean the brewing sieve under running water or with a cloth
- * Remove ground coffee residues with a brush
- * Rinse the brewing unit under running water



Figure 3



Possible damage

- The brewing unit can get damaged by cleaning products or in the dishwasher
 - > Use only water to clean the brewing unit
 - > Never clean the brewing unit in the dishwasher

- * Dry off the brewing unit with a cloth
Let it dry completely before installing it into the coffee machine

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Remove ground coffee residue in the shaft

- * Wipe out the ground coffee towards the front or use a Hoover
- * Insert the springs into the insertion chute (Figure 4)

Pay attention to the guides.

Reinstall the dry brewing unit.

Turn the thread on the head of the brewing unit anticlockwise (Figure 2) until the scraper is once again

completely folded in

- * Press and hold down the lock and place the brewing unit into the shaft all the way to the back on the rear wall
- * Push the brewing unit upwards vertically until the lock engages
- * Insert the grounds container.
- * Insert the drip tray



If the brewing unit cannot be inserted without resistance:

- > Turn the thread on the head of the brewing unit a bit to the left or right with the multi-tool until the brewing unit slides into the guides.
- > Never use force! Risk of breakage.



Figure 4



Brewing sieve

IMPORTANT

Observe the Warranty chapter
▷ from page 100

7.6.9 Cleaning the milk system by hand



Danger of scalding

- If a beverage is accidentally initiated, there is a risk of injury.
 - > Always switch off the coffee machine before cleaning
 - > Pull the power plug

- * Perform a milk system cleaning process
- * Remove the front cover from the outlets
- * Remove the milk foam with the steam nozzle
- * Disassemble the individual parts and thoroughly clean with warm, running water
- * Clean the guide in the outlet with a moist cloth
- * Clean the channels and the connections with the supplied cleaning brush



Health risk


- If it comes into contact with the eyes, the Schaerer milk system cleaner can cause serious eye injuries.
 - > Ensure that the milk system cleaner never gets into the eyes of humans or animals.

- * Mix 5 ml of special cleaner with 0.5 litres of warm drinking water
- * Lay all individual parts, including the cleaning brush, into the prepared cleaning liquid
All parts must be completely covered with the cleaning liquid.
- * After 5 hours, thoroughly clean all parts with a brush
- * Very thoroughly clean all parts with pure drinking water

CAUTION

Observe the Safety chapter
▷ from page 8

Animated instructions
▷ Coffee machine
▷ Main menu
▷ Care
▷ Instructions

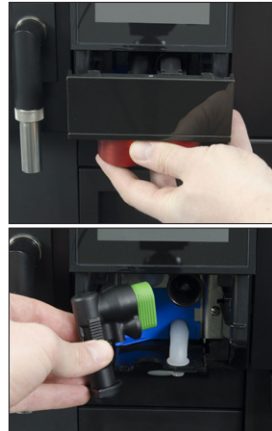

CAUTION

Observe the Safety chapter
▷ from page 8

**Health risk/Hygiene**

- > The decorative strips on the outlet can be disassembled and cleaned if necessary

**Risk of burns/
Danger of scalding**

- The steam nozzle without milk foamer can blow off hot steam



- > Never install the steam nozzle without the milk foamer

- * Assemble the milk foamer

Moisten the parts to be assembled, do not grease

- * Assemble the parts and press down firmly
- * Reinsert the milk foamer into the outlet

Cleaning the milk hose

- * Put one end of the milk hose to the other parts into the cleaning liquid
- * Lay the rest of the milk hose into the cleaning liquid lengthwise

This process prevents air bubbles from remaining in the milk hose.

All parts must be completely covered with the cleaning liquid.

CAUTION

Observe the Safety chapter
▷ from page 8

CAUTION

Observe the Safety chapter
▷ from page 8



"Cleaning milk hose"
instructions ▷ Instructions
page 40

7.6.10 Cleaning the mixer

Clean more often depending on the powder used.

- * Carry out a mixer rinse
- * Open the doors
- * Pull the mixing bowl forwards with the handle
- * Lift the mixing bowl slightly so that any remaining water runs out
- * Pull off the mixer hose, from the mixing bowl to the outlet, and take it out of the guide

The mixer's propeller is now visible.

- * Clean the propeller with a cloth
- * Disassemble the two-part mixing bowl
- * Clean both mixing bowl parts and the mixer hose under warm, running drinking water
- * Let the parts dry fully

At the time of reassembly, all openings must point in the same direction

- * Insert the mixer hose into the outlet through the guide
- * Reinsert the mixing bowl until it engages
- * Attach the mixer hose to the mixing bowl



Danger of scalding

- If the mixer hose is not firmly connected, hot water or hot powder-based beverage can escape unintentionally.
 - > Attach the mixer hose to the mixing bowl.

Animated instructions

- ▷ Coffee machine
- ▷ Main menu
- ▷ Care
- ▷ Instructions



 **CAUTION**

Observe the Safety chapter
▷ from page 8

7.6.11 Cleaning the bean hoppers

The permanently installed bean hoppers can be cleaned at regular intervals and as needed.

Recommendation: monthly.



Risk of injury

- Very long hair could get stuck in the grinder head and get pulled into the coffee machine.
- > Always protect hair with a hairnet before you remove the bean hopper.

CAUTION



Risk of trapping/Risk of injury



- The coffee machine contains moving parts which could injure fingers or hands.
- > Always switch off the coffee machine and pull out the power plug before reaching into the coffee grinder or into the opening of the brewing unit.

CAUTION

- * Briefly press on the On/Off switch (approx. 1 second)

The coffee machine switches off.

- * Pull the power plug
- * Remove the bean hopper lid, empty it and clean with a damp cloth
- * Clean the lock elements in the bean hopper with the supplied brushes
- * Let the bean hopper dry fully
- * Refill the bean hoppers and close with the lids

Bean hopper extension (optional)

- * Unlock the extension
- * Remove the extension upwards
- * Thoroughly wipe the extension with a damp cloth and let it dry
- * Put on the extension and lock

7.6.12 Cleaning the powder container

The permanently installed bean hoppers can be cleaned at regular intervals and as needed.

Recommendation: monthly.

Clean more often depending on the powder used.



Risk of injury

- Very long hair could get stuck in the grinder head and get pulled into the coffee machine.
 - > Always protect hair with a hairnet before you remove the bean hopper.
-

CAUTION


- * Briefly press on the on/off switch (approx. 1 second)

The coffee machine switches off.

- * Pull the power plug
- * Pull the safety catch on the powder container and loosen it
- * Remove the powered container lid, empty it and clean with a damp cloth
- * Unscrew the cap nuts at the front and rear
- * Pull out the portioning screw and remove the discharge cap
- * Wipe out the hopper thoroughly with a moist cloth



- * Thoroughly clean the individual parts of the positioning screw with the supplied cleaning brush
- * Let the powder container and the individual parts dry completely
- * Reassemble and install the portioning screw and screw on the cap nuts

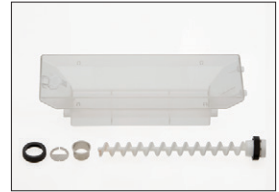

*Portioner with individual parts
Portioning screw*



Ensure that discharge cap is correctly positioned.

IMPORTANT

- * Fill the powder container and put on the lid
- * Close the lock

Powder container extension (optional)

- * Unlock the extension
- * Remove the extension upwards
- * Thoroughly wipe the extension with a damp cloth and let it dry
- * Put on the extension and lock



8 HACCP cleaning concept


You are legally obligated to ensure that you do not expose your guests to any health hazards when consuming the provided food or beverage. A HACCP (Hazard Analysis Critical Control Points) cleaning concept is required to identify and assess hazards. You should perform a risk analysis in your operations. The goal is to detect and eliminate hazardous areas. To do so, monitoring processes and, if necessary, test procedures must be defined and enforced.

When installed, maintained, cared for and cleaned properly, Schaerer coffee machines fulfil the regulations named above. If the coffee machine is not cared for and cleaned properly, the dispensing of milk beverages can present a food hygiene risk. Observe the following points to comply with the HACCP cleaning concept:

Sterilise the milk system daily

- Follow the cleaning specifications for the milk system in the Care chapter. This ensures that your system has a very low microbiological content at the time of starting operation.

 You can call up the logs of the last cleanings using the Info field .

You can export a HACCP log using the USB field .

"Regulation on the hygiene of foodstuffs from 5/8/1997"

Use our HACCP cleaning concept to monitor the regular cleaning process.

HACCP export
▷ page 62

Only use the cleaning products approved of by Schaerer.

Observe the Care chapter
▷ from page 65

TIP

Always start operation with a newly-opened, pre-cooled milk package

- UHT milk in its original packaging is typically free of hazardous bacteria. Always opens a new, pre-cooled milk package when starting operation.
- Ensure absolute cleanness when opening the milk package! Bacteria can be transmitted to milk when opening if hands or tools are not clean.

Recommendation:

Use UHT milk with 1.5% fat.

Keep the milk cool!

- Always keep a new, pre-cooled milk package ready.
- If cooling is not done during operation, the milk must be used very quickly. If necessary, cool the milk between use.
- If not much milk is used, the pre-cooled milk must be cooling during operation.

The milk should be about 6-8 °C when starting operation.

Depending on the setting, a litre of milk makes about 20 cappuccinos.

Schaerer offers various cooling options (e.g. Schaerer side cooler or Schaerer milk cooler).

Month _____ Year _____

HACCP cleaning schedule

Only use chilled UHT milk, to prevent health risks due to bacteria.
 For powder beverages, use only products that have not exceeded their expiration date.

Cleaning steps:

Daily

1. Switch-off rinsing
 ▷ Starts automatically when the machine is switched off.
 Milk system rinsing and mixer rinsing are included in the switch-off rinsing cycle.
2. Clean the operating panel, grounds container, drip tray, and housing
 ▷ User Manual, Care chapter

Weekly

3. System cleaning
4. Clean the mixer and milk system manually
 Clean the water tank

Regularly

5. Clean the product hoppers (beans/powder)
 Clean the dispensing spouts and the brewing unit
 ▷ User Manual, Care chapter

Date	Cleaning steps					Signature
	Time					
	1	2	3	4	5	
1.						
2.						
3.						
4.						
5.						
6.						
7.						
8.						
9.						
10.						
11.						
12.						
13.						
14.						
15.						
16.						

Date	Cleaning steps					Signature
	Time					
	1	2	3	4	5	
17.						
18.						
19.						
20.						
21.						
22.						
23.						
24.						
25.						
26.						
27.						
28.						
29.						
30.						
31.						

9 Maintenance and descaling

Please note that this is a professional coffee machine for businesses that requires regular maintenance and descaling.

The maintenance due date depends on the duration of use and is indicated on the display. When Schaerer Service does maintenance, the descaling of the brewing system is done at the same time.

The coffee machine can continue to be used after the notification is output, but the execution or commissioning of maintenance work must be done in a timely manner to ensure functional safety and prevent consequential damages.

9.1 Maintenance

Maintenance after notification on the display only by trained staff or Schaerer Service, since safety tests have to be done.

The following maintenance levels exist:

- Descaling, can be done by the operator/user.
- Maintenance after notification on the display, only by trained staff or Schaerer Service, since safety tests have to be done.

Service-maintenance notifications
▷ *Notifications and notes*
page 90

Descaling
▷ *Software* ▷ *Care* ▷ *Descaling*
page 71

Service-maintenance notifications
▷ *Notifications and notes*
page 90

9.2 Schaerer Service

Schaerer Service can be reached via a central address if the sales centre for a particular location is not known.

Schaerer AG
Allmendweg 8
P.O.Box 336
4528 Zuchwil
Switzerland

Support in Switzerland:
Telephone: +41 32 681 62 75
E-mail: technical-support@schaerer.com


Important!

For other maintenance work and repairs, contact the responsible Schaerer Service. The telephone number can be found on the address label on the coffee machine and on the delivery slip.

10 Notifications and notes

10.1 Operation notifications

Refilling beans

- * Refill the bean hopper (depending on the display)
- * Check that:
 - The coffee beans are not sliding down in the hopper.
 - Stir with a large spoon and confirm with .
- * Perform the "Beans empty notification calibration"

Beans empty notification calibration software

▷ Page 61

Opening stopcock

- * Open and confirm the water stopcock

Empty grounds container

- * Empty the grounds container.

Grounds container missing

- * Correctly reinsert the grounds container

Changing the water filter

- * Change the water filter

Observe the operating instructions of the water filter.

- * If necessary, call Schaerer Service

Note

We recommend using the bestmax V water filter for coffee machines with mains water supply.

Call Schaerer Service

Display of the error number

▷ *Error messages and faults*

Service notification

= Service maintenance after notification on the display

- * Call Schaerer Service

Service notifications are information. It is usually still possible to operate the coffee machine.

10.2 Error messages and faults

Basic procedure when error messages or faults are displayed:

- * Switch the coffee machine off and, after several seconds, back on
- * Repeat the process that caused the fault


In many cases the fault is then eliminated and you can continue

If this is not successful: Search for the displayed error text or error number in the error list shown below and proceed as instructed.

If this is not successful or the displayed error is not listed, please call Schaerer Service.

Some messages cause individual functions to be disabled. You will see this when the beverage button lighting goes out. The beverages of the beverage buttons that remain lit can continue to be dispensed.

Your Schaerer Coffee Club is equipped with a diagnosis program. Any occurring errors appear on the display. The listed error messages could also be caused by a mains fault.

In the event of a current error or a note for the operator, the  field is displayed.

- * Tap on .

The error message and the error number are displayed.





The on/off switch reacts after approximately 1 second and the coffee machine switches off.

When troubleshooting, for example if the software freezes, the PC board can be switched off by pressing and holding the on/off switch.

NOTE

Error number	Error description	Instruction
6	Brewing unit stalling current/ Brewing unit stiff	<ul style="list-style-type: none"> * Switching off the coffee machine * Clean the brewing unit <p>▷ Care ▷ Brewing unit cleaning, page 77</p>
88	Boiler: Excess temperature	<ul style="list-style-type: none"> * Switch the coffee machine off, let it cool down and switch it back on <p>If the error is not fixed</p> <ul style="list-style-type: none"> * Switching off the coffee machine * Call Schaerer Service
89	Boiler: heating time error	<ul style="list-style-type: none"> * Switch the coffee machine off and back on * If the error is not fixed, call Schaerer Service
161	Water error: Brewing water	<p><i>Switch the coffee machine off and on again after every one of the following steps. If the error is not fixed, perform the next step.</i></p> <ul style="list-style-type: none"> * Clean the brewing unit <p>▷ Care ▷ Brewing unit cleaning, page 77</p> <ul style="list-style-type: none"> * Set the grind level to a coarser setting <p>▷ Other settings ▷ Setting grind level, page 64</p> <ul style="list-style-type: none"> * Lower the quality <p>▷ Setting ▷ Recipes, page 45</p> <ul style="list-style-type: none"> * If the error is not fixed, call Schaerer Service
162	Water error: When cleaning	<p><i>Switch the coffee machine off and on again after every one of the following steps. If the error is not fixed, perform the next step.</i></p> <ul style="list-style-type: none"> * Clean the brewing unit <p>▷ Care ▷ Brewing unit cleaning, page 77</p> <ul style="list-style-type: none"> * If the error is not fixed, call Schaerer Service

Error number	Error description	Instruction
163	Water error: Warm rinsing	<p>Switch the coffee machine off and on again after every one of the following steps. If the error is not fixed, perform the next step.</p> <ul style="list-style-type: none"> * Clean the brewing unit <p>▷ Care ▷ Brewing unit cleaning, page 77</p> <ul style="list-style-type: none"> * If the error is not fixed, call Schaefer Service
186	Steam boiler: level	<p>Dispensing is temporarily disabled.</p> <ul style="list-style-type: none"> * Check that the grounds container has been installed correctly * Switch the coffee machine off and back on
188	Heating error; Steam boiler overtemperature	<ul style="list-style-type: none"> * Switch off the additional coffee machine, pull out the mains plug * Call Schaefer Service
189	Steam boiler: heating time error	<ul style="list-style-type: none"> * Switch the coffee machine off and back on * If the error is not fixed, call Schaefer Service <p>▷ Care ▷ Cleaning the milk system by hand, page 80</p>
9083	Cooler temperature is in the frost range	<ul style="list-style-type: none"> * Check whether the cooler temperature is set too low
9516 9517	Right grinder blocked Left grinder blocked 	<ul style="list-style-type: none"> * Switching off the coffee machine * Pull the power plug * Remove bean hopper lids * Empty the bean hopper * Turn the grinding disk anticlockwise only using the multi-tool for the container (two pins must be inserted into the respective recesses of the grinder, see figure) * Fill the bean hoppers * Put the bean hopper lids back on * Switching on the coffee machine <p>▷ Care ▷ Bean hopper cleaning, page 83</p> <p>If this happens frequently:</p> <ul style="list-style-type: none"> * Set the grinding fineness one level coarser <p>▷ Other settings ▷ Setting grind level, page 64</p> 

10.3 Error without error message

Error description	Instruction						
<ul style="list-style-type: none"> No hot water dispensing, but water in grounds container 	<ul style="list-style-type: none"> * Clean the hot water outlet * Call Schaerer Service (coffee dispensing is possible) 						
<ul style="list-style-type: none"> No choco dispensing, but water in grounds container. 	<ul style="list-style-type: none"> * Stop using the Choc outlet * Call Schaerer Service (coffee dispensing is possible) 						
<ul style="list-style-type: none"> Choco portioner blocked, choco is only dispensed with water 	<ul style="list-style-type: none"> * Clean the portioner ▷ Care ▷ <i>Cleaning powder container, page 84</i> * Empty the powder * Turn the screw by hand until all powder has been removed * Rinse with water, if necessary * Dry or let dry fully 						
<ul style="list-style-type: none"> Dispensing of coffee differs on the left/right 	<ul style="list-style-type: none"> * Clean the coffee outlet ▷ Care ▷ <i>Cleaning the milk system by hand, page 80</i> 						
<ul style="list-style-type: none"> Milk foam/Milk is not being dispensed although there is milk in the container 	<ul style="list-style-type: none"> * Check whether the milk hose is kinked or pinched * Check the correct steam nozzle is used * Route the milk hose properly * Clean the milk outlet * Refill milk * Check whether the milk cooler is iced over 						
<ul style="list-style-type: none"> Milk foam is not correct 	<table border="0"> <thead> <tr> <th data-bbox="418 979 669 1007">Colour</th> <th data-bbox="669 979 972 1007">Milk temperature</th> </tr> </thead> <tbody> <tr> <td data-bbox="418 1007 669 1070"> <ul style="list-style-type: none"> Green (standard) </td> <td data-bbox="669 1007 972 1070"> <ul style="list-style-type: none"> Uncooled milk (16 to max. 22 °C) </td> </tr> <tr> <td data-bbox="418 1070 669 1134"> <ul style="list-style-type: none"> Orange (accessories) </td> <td data-bbox="669 1070 972 1134"> <ul style="list-style-type: none"> Cooled milk (up to 10 °C) </td> </tr> </tbody> </table> <p>If the error is not fixed</p> <ul style="list-style-type: none"> * Use the other steam nozzle from the accessories 	Colour	Milk temperature	<ul style="list-style-type: none"> Green (standard) 	<ul style="list-style-type: none"> Uncooled milk (16 to max. 22 °C) 	<ul style="list-style-type: none"> Orange (accessories) 	<ul style="list-style-type: none"> Cooled milk (up to 10 °C)
Colour	Milk temperature						
<ul style="list-style-type: none"> Green (standard) 	<ul style="list-style-type: none"> Uncooled milk (16 to max. 22 °C) 						
<ul style="list-style-type: none"> Orange (accessories) 	<ul style="list-style-type: none"> Cooled milk (up to 10 °C) 						

<i>Error description</i>	<i>Instruction</i>
<ul style="list-style-type: none"> • Milk foam outlet sprays heavily • Milk too hot 	<ul style="list-style-type: none"> * Check whether the milk system has been cleaned * Clean the milk system ▷ Care ▷ <i>Cleaning the milk system by hand, page 80</i> * Check whether the milk used is cool enough
<ul style="list-style-type: none"> • No powder-based beverage dispensing 	<ul style="list-style-type: none"> * Clean the mixing bowl * Is the hose is kinked? * Rinse and clean more often, daily if needed ▷ Care ▷ <i>Overview of cleaning intervals, page67</i> ▷ Care▷ <i>Cleaning the milk system by hand, page 80</i> * Set less powder * Set more water
<ul style="list-style-type: none"> • Pump runs permanently, water in the grounds container 	<ul style="list-style-type: none"> * Switch the coffee machine off and back on * If the error is not fixed, call Schaerer Service

11 Safety and warranty

11.1 Hazards for the coffee machine



Follow the instructions

Failure to do so will result in a loss of warranty coverage in the event of damage. Follow use and installation requirements.

Installation location

- The installation location must be dry and protected from spray water.
- Water, condensation or steam can always escape from a coffee machine.
- > Do not use the coffee machine in the open.
- > Set up the coffee machine so that it is protected from spray water.
- > Make sure to set the coffee machine on a water-resistant surface which is not sensitive to heat to protect the installation surface from damage.

Coffee grinder

- Foreign particles may damage the grinder. These damages are excluded from the warranty.
 - > Ensure that no foreign particles enter the bean hopper.
-

IMPORTANT

Observe the Warranty chapter
▷ from page 100

Conditions of installation and use
▷ from page 15

Please comply with the following instructions in order to prevent technical problems or damage to the coffee machine:

- For drinking water with a carbonate hardness from 5°dKH and above, a Schaerer water filter should be installed, as otherwise the coffee machine can be damaged due to calcification.
- For insurance-related reasons, always ensure the following after the establishment has closed for the day. The main valve of the water supply is closed and the electrical main switch is switched off or the power plug is disconnected.
- We recommend the implementation of measures for damage prevention, such as:
 - Installation of a suitable water detector in the water supply
 - Installation of smoke detectors
- After a break in operation, we recommend running the cleaning programme at least twice before recommissioning.

System cleaning
▷ *Cleaning programmes*
page 68

11.2 Directives

Manufacturer: WMF Group GmbH, 73312 Geislingen (Germany)

The device complies with the requirements of all relevant condition of directives MRL (MD) 2006/42/EG (EC), EMC Directive 2014/30/EU and RoHS 2011/65/EG (EC).

The aforementioned manufacturer declares herewith that this machine complies with all relevant stipulations of the specified directives. In case of any modifications of the units that have not been approved by Schaerer, this declaration is rendered invalid. Compilation of technical documents: WMF Group GmbH.

An original Declaration of Conformity is included with the device. The device has the CE label.

The device fulfils the requirements of the Foods, Consumer Goods and Feedstuffs Code (LFGB), the Consumer Goods Ordinance (BedGgstV), Regulation (EU) no. 10/2011 as well as Regulation (EU) no.1935/2004 in their most current versions. If used for its intended purpose, the device does not pose a risk to health or other unacceptable risks.

The materials and resources used comply with the Consumer Goods Ordinance (BedGgstV) as well as Regulation (EU) no. 10/2011.

The relevant national requirements for countries outside of the EU apply.

The device is subject to the Regulation on Electrical and Electronic Waste WEEE 2012/19/EG (EC) and must not be disposed of with household waste.

We ensure and guarantee compliance with the traceability requirements set out in Regulation (EC) No. 1935/2004 as well as manufacture according to good manufacturing practice as set out in Regulation (EC) No. 2023/2006.



For disposal, contact Schaerer Service.

*Address
▷ page 89*

11.3 Operator responsibilities

The operator of such systems must ensure that the machine undergoes regular maintenance by a Schaerer service technician, a representative thereof, or other authorised persons, and that the safety devices are checked regularly.

Access to the service area is only allowed for persons who have the knowledge of and practical experience with the device, particularly when it comes to service and hygiene.

The coffee machine must be installed by the operator so that there are no impediments to care and maintenance.

In office service or other self-service applications, staff instructed in operation of the coffee machine should supervise the coffee machine. The trained staff must ensure that care measures are complied with and be available for questions regarding its use.

The operator must ensure that the electrical equipment and operating materials are in good condition (e.g. in accordance with DGUV provision 3). To ensure safe operation of your coffee machine, the safety valves and the pressure vessel must be checked regularly.

These measures are performed by Schaerer Service or by service staff authorised by Schaerer as part of the maintenance routine.

System cleaning must only be done using Schaerer special cleaning products provided by Schaerer for the coffee machine (tablets) and for the milk system (liquid cleaner).

The manufacturer specifications on maintenance cycles and maintenance frequency (▷ Maintenance) must be followed.

Schaerer special cleaning products
▷ Accessories and spare parts
page 103

11.4 Warranty claims



Follow the instructions

- Failure to do so will result in a loss of warranty coverage in the event of damage.
 - > Follow use and installation requirements.
-

IMPORTANT

Conditions of installation and use
▷ from page 15

The agreement made between the seller and the purchaser determines whether the buyer is entitled to warranty claims as well as the definition of the warranty claims to which the buyer is entitled. If the information in these operating instructions is not observed, warranty claims can be invalid.

No liability is accepted:

- For parts which are subject to natural wear. These include seals, mixer and the brewing unit, among others.
- For defects as a result of climatic influences, limescale deposits, chemical, physical, electrochemical or electrical influences.
- If no water filter is used, although the local water hardness would require use of a water filter, and problems occur as a result.
- For defects caused by failure to observe the specifications with regard to the handling, servicing and care of the machine (e.g. operating manual and servicing instructions).
- For defects arising as a result of failure to use original Schaerer spare parts or due to incorrect assembly by the purchaser or third parties or incorrect or negligent handling.
- For defects as a result of inappropriate and unauthorised technical modifications to the machine or repairs carried out by the purchaser or third parties.
- For defects arising from inappropriate or incorrect use.

Important

Maintenance
▷ page 88

Appendix: Technical data

Technical data of the coffee machine

External dimensions	Width 325 mm Depth 570 mm Height of housing 460 mm Height including display 501 mm Height including container extension 550 mm
Bean hopper	About 550 g; with optional extension about 1,100 g ⁽¹⁾
Powder container	About 450 g; with extension about 800 g ⁽²⁾
Empty weight	24-28 kg (depending on the machine configuration)
Water supply	3/8" hose connection with main water valve and dirt filter, with a mesh size of 0.08 mm, installation site. At least 0.2 Mpa (2 bar) flow pressure at 2 l/min., maximum 0.6 Mpa (6 bar). Maximum inlet temperature 35°C The hose set delivered with the new coffee machine and/or the new water filter must be used. Do not reuse old hose sets.
Water quality	For drinking water with a carbonate hardness above 5°dKH, a Schaerer water filter should be installed.
Water drainage line (optional)	Hose at least DN 19, minimum slope 2 cm/m
Water tank volume	Approx. 4.5 l
Use at height above sea level	< 2000 m
Nominal power	1.9–2.3 kW
Voltage supply	220–240 V, 50/60 Hz, (1/N/PE)
Lighting	LED class 1
Degree of protection	IP X0
Protection class	
Continuous sound pressure level (Lpa)	< 70 dB(A) ⁽³⁾

We reserve the right to make technical changes.

⁽¹⁾ The filling quantity is dependent on the coffee bean size.

⁽²⁾ Only with optional powder container. The filling quantity is dependent on the powder used.

⁽³⁾ The A-weighted noise level Lpa (slow) and Lpa (impulse) at the operators' workplace is below 70 dB(A) in every operating mode.

Safety and warranty

Ambient temperature	+5°C up to max. +35°C (drain the water system in the event of frost).
Maximum humidity	80% relative humidity without condensation. Do not use the device in the open.
Installation surface/Spray water	<p>The device must be installed on a level, horizontal and firm surface which is water- and heat-resistant.</p> <p>The device must not be cleaned with a water jet. The device must be installed where it is protected from spray water. The device must not be installed on a surface which is sprayed or cleaned with a water hose, a steam jet device, a steam cleaner or similar.</p>
Set-up distances	<p>For functional, service and safety reasons, during installation a minimum distance of 50 mm is required between the machine and sides of the building - or from parts not manufactured by Schaerer - or at least 60 mm between the machine and the rear wall. A minimum work space in front of the coffee machine of 800 mm is recommended. Free space of at least 200 mm above the product container is recommended. The height of the installation surface, starting from the upper edge of the floor, must be at least 850 mm. If the coffee machine's connections are to run downward through the counter, observe the space requirements of the lines which can restrict usable space in the structure underneath.</p>
Water filter set-up distances	See the operating instructions of the water filter.

These specifications for the electrical connection of the machine and the standards listed apply for connection of the coffee machine in EU countries. Where appropriate, additional country-specific regulations must be complied with. Outside the EU countries, the person or organisation marketing the coffee machine must check the acceptance of the listed standards.

The electrical system on the installation site must conform to the current IEC 364 (DIN VDE 0100). A Schuko socket or a country-specific single-phase socket (for single-phase connections), or a 5-pin CEE/CEKON socket in accordance with EN 60309 or a country-specific multiple-pin socket (for three-phase connections) must be provided near the device and be freely accessible. The sockets are part of the structural installation. The power cord must not rest against hot components. If the power cord of this device has been damaged, it must be replaced by our Service or by a competent person to prevent danger.

In order to prevent possible faults of our shielded data lines due to potential equalisation currents between the devices, an additional potential equalisation device should be provided for devices connected to an accounting system. (See EN 60309)

Appendix: Accessories and spare parts

Number	Unit	Designation	Equipment
Coffee outlet/Milk outlet/Choco outlet/Milk lance			
1	Pcs.	Coffee outlet lid	All
1	Pcs.	Double cup coffee outlet	All
1	Pcs.	Choco mixer outlet (hose)	Powder container
1	Pcs.	Milk hose sleeve	Milk Smart
1	Pcs.	O-ring (basic steam outlet)	Basic Steam
1	Pcs.	Milk lance	Milk Smart
1	Pcs.	Brush for cleaning the milk lance	Milk Smart
Grounds container			
1	Pcs.	Grounds container	All
Accessories/Tools			
1	Meter	Milk hose	Milk Smart
1	Pcs.	Milk connector	Milk Smart
1	Pcs.	Plug & Clean hose adapter	Milk Smart
1	Pcs.	Suction chamber foamer, green	Milk Smart
1	Pcs.	Suction chamber foamer, orange	Milk Smart
1	Pcs.	Suction chamber connection	
1	Pcs.	O-ring (friction piston)	All
1	Pcs.	Multi-tool	All
Bean hopper/Product container			
1	Pcs.	Lid for bean hopper	All
1	Pcs.	Lid for powder container	Choco
1	Pcs.	Powder container without lid	All
Drip tray/Drip grid			
1	Pcs.	Drip tray with SteamJet	SteamJet
Water tank			
1	Pcs.	Water tank	All
1	Pcs.	Water tank lid	All
1	Pcs.	O-ring (water tank)	All
Limescale filter/Water filter			
1	Pcs.	Water filter (complete construction kit)	Fixed water
1	Pcs.	Spare cartridge for water filter	Fixed water

Appendix: Accessories and spare parts

Number	Unit	Designation	Equipment
1	Pcs.	Adapter for replacement cartridge 200	Water tank
1	pack	Filter 200 replacement cartridge, 4-pc. set	Water tank
Documentation/Instructions			
1	Pcs.	Documentation set: Operating instructions Schaerer Coffee Club	All
Order number for the Schaerer care programme			
1	bottle	Schaerer special cleaner for the milk foamer	All
1	pack	Special cleaning tablets (100 pcs.)	All
2	bottle	Calcpure 750 ml	All
1	Pcs.	Pipe cleaning brush	All
1	Pcs.	Cleaning brush 2.5	All
1	Tube	Schaerer "grease for sealing rings", Molykote	All